

[Home](#) ■ [Termékek](#) ■ [Mikroszűrő / Homokszűrő](#) ■ [Mikroszűrő](#) ■ [HUBER Drum Screen LIQUID](#)

## HUBER Drum Screen LIQUID



Reliable fine screening with maximum separation efficiency

- **Maximum retention of fibres and hair**
- **Operating reliability for membrane bioreactors**
- **Maximum COD / BOD<sub>5</sub> reduction rates**

The HUBER Drum Screen LIQUID is available in different designs and suitable for numerous applications of solids-liquid separation. Depending on the specific application requirements the horizontal drum is covered with a **mesh**, **wedge wire** or **perforated plate** and is suitable for channel or tank installation.

### Design and Function

The characteristic feature of the HUBER Drum Screen LIQUID is its screen basket which is horizontally installed in the channel or in a tank. The wastewater to be treated flows through the basket from inside to outside. Whilst the wastewater flows through the open front into the screen basket, solids are retained within the drum. A special sealing between the channel and the front-end screen basket opening prevents unscreened wastewater from passing through the screen basket.

The solids settling on the drum surface lead to gradual blinding of the surface. As a result, the water level upstream of the screen rises. When the predefined maximum water level has been reached, the screen basket starts to rotate around its axis to clean its surface. At its crown a spray nozzle bar sprays water onto the drum surface from outside to remove the solids and flush them into a trough inside the drum basket from where the screenings are discharged by gravity.

### Model variations

## Drum Screen LIQUID ww: wedge wire

- Wedge wire sizes 0.5 / 1 / 2 / 3 mm
- Solids retention up to 10,000 m<sup>3</sup>/h per machine
- Typical applications: Mechanical pretreatment on sewage treatment plants, industrial solids-liquid separation

## Drum Screen LIQUID pp: perforated plate

- Perforations 1.5 / 2 / 3 mm
- High separation efficiency and retention of fibres and hair
- Typical applications: Protection of membrane filtration plants

## Drum Screen LIQUID star: folded perforated plate

- Perforations 1 / 1.5 / 2 mm
- Increased screen surface for higher throughputs, high separation efficiency and retention of fibres and hair
- Typical applications: Protection of membrane filtration plants

## Drum Screen LIQUID mesh: fine mesh fabric

- Mesh sizes from 0.2 up to 0.75 mm
- Maximum separation efficiency and reduction of COD and BOD by 20 – 40%
- Typical applications: Load reduction in the preliminary treatment stage, replacement for primary settlement tank, sea and river outfall applications

## Előnyök

### THE BENEFITS OF THE ROMESH® SCREEN

- The square mesh provides a defined separation size
- Low headloss
- Mechanical COD/BOD reduction by up to 30 %
- Filterable solids (AFS) reduction by up to 60 %
- Optional periodic high pressure cleaning (120 bar)
- Addition of precipitants and flocculants reduces AFS up to 95%, COD/BOD up to 65%, phosphorus up to 60%.
- Enclosed, compact design
- Very high hydraulic throughput


## Downloads

 [Letöltés: ROTAMAT® Rotary Drum Screen RoMesh® \(angol nyelven\)](#) [pdf, 299 KB]

## Tapasztalatok

- [Implementation of economically efficient septic tank systems in the range of 10,000 to 20,000 p.e.](#)
- [HUBER Drum Screen LIQUID - innovative overall process succeeds in Norway](#)
- [Busy - the mobile plants with HUBER Drum Screen LIQUID help in planning and operation](#)
- [HUBER supplies a process system as replacement for the primary settling tank](#)
- [Carbon removal with HUBER fine screening technology – a success story](#)
- [New product HUBER Drum Screen LIQUID: Increasing requirements need adapted solutions](#)
- [Mechanical wastewater pre-treatment for membrane bioreactors](#)

## Elvi vázlatok

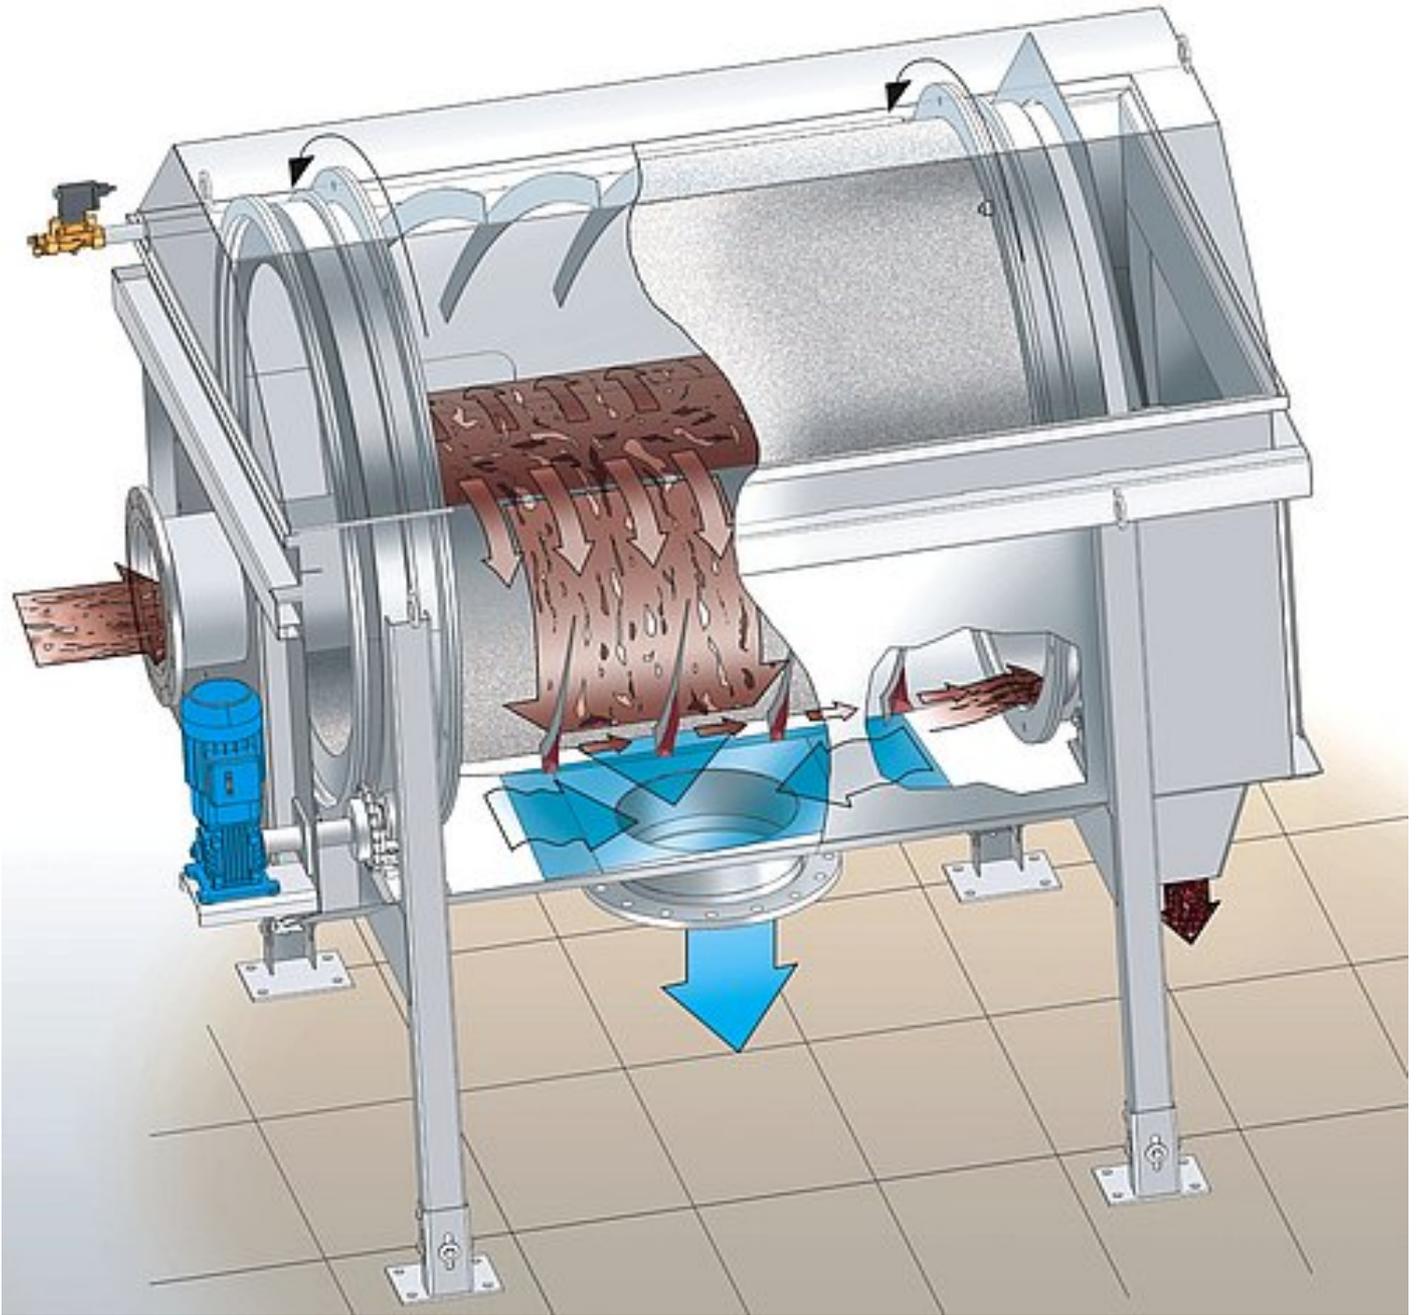

## Media





Video: HUBER Drum Screen  
RoMesh®

[https://www.youtube.com/watch?  
v=nNstEvZA-24](https://www.youtube.com/watch?v=nNstEvZA-24)

### Csoport további termékei: Mikroszűrő

- HUBER Membrános Screen ROTAMAT® RoMem
- HUBER Dobszűrő RoMesh®
- HUBER Tárcsaszűrő RoDisc®



Silex Water Technologies Kft.  
H-8230 Balatonfüred  
Fürdő u. 17/B.  
Magyarország

Tel. +36 87 580 140  
Fax +36 87 580 139  
Email [info@huber-technology.hu](mailto:info@huber-technology.hu)  
WWW [www.huber-technology.hu](http://www.huber-technology.hu)

A HUBER csoport képviselete